
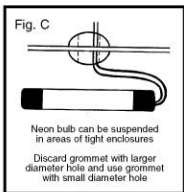
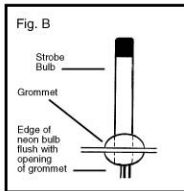


ANHLN
The Original
Auto-Neon® Accessories

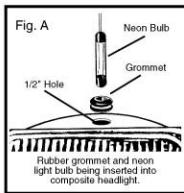

Contents:

- 1- Transformer with Dual Neon Light Leads
- 2- Headlight Neon Bulbs
- 1- Installation Hardware

Installation:

- 1) Mount neon transformer on a flat surface that is well ventilated in the engine compartment with the screws or double sided tape provided.
- 2) When installing neon, it is recommended to remove headlight housing for easy installation. Locate a desired neon placement in the headlight housing and drill a 1/2" dia. hole. Insert rubber grommet into 1/2" hole (Fig. A). Slide neon bulb through rubber grommet until flush (Fig. B). For areas of limited space, such as: tail lights, marker lights, heating vents, and directional assemblies, suspend bulb within enclosure (Fig. C).
- 3) Connect neon to transformer lead connectors
- 4) Connect (+) red striped black wire to a switch*.
- 5) Connect (-) black wire to ground.
- 6) Connect a constant 12V power source to a switch.* (Always refer to the switch wiring diagram for proper 12V connection).
- 7) Insulate your connections with black electrical tape to ensure moisture free connection.
- 8) Secure wires from all moving and heat producing parts.

Professional Installation Recommended, see an Authorized Street Glow Dealer.

